

Guidelines and Cautions for use

- The iH-holder is not waterproof. It is the users responsibility to safeguard your mobile device against moisture and dirt. Exposure to the elements without proper protection may lead to issues when using your device. Please make sure to place your device in a waterproof pouch if you will be exposing it to rain or excessive moisture.
- The iH-holder is designed to hold your device in place through a variety of riding scenarios. However excessive or extreme shocks (such as extreme off road riding) may cause the holder to not function properly. Before every ride always check the lock to make sure it is properly engaged no matter what kind of riding you're doing. Minoura is not responsible for any damage to your device when using the iH-holder.
- Every device has different placement for speakers, jacks, cameras, etc. The iH-holder may not leave every area accessible.
- While the iH-holder is highly adjustable and can be used with many protective cases, please make sure to initially set the product up carefully to avoid any mishaps.
- Minoura highly advises to check the condition of the holder often, especially if it is kept out in the sun or elements. Natural aging can be accelerated in extreme conditions and may compromise the fit or durability if not taken care of properly. Minoura is not responsible for wear due to elements.
- The appropriate clamping force should be adjusted at the quick clamp first. Make sure to release the lock lever. If you do not follow these steps, it may be possible that the holder is not tightened down enough and may be loose.
- When checking to make sure the lever is properly attached to the handlebar, see that the adjust bolt is inserted fully into the body of the holder.
- To protect your handlebar from scratches, be sure to use the included plastic shim and place it under the clamp and over your bar.
- Use the pad of your finger tip to flip open the lever. Using only your fingernail may cause injury.
- Take care not to crush other cables routed along your handlebar by the clamp.
- The iH-holder can only be attached to round (not oval or other shapes) seat posts and handlebars.
- Remove the holder when you park your bike to prevent possible theft. Minoura is not responsible for the theft of the device or holder.
- Local laws may restrict the use of your device while on your bicycle. Be sure to follow all laws pertaining to mobile device use while operating your bicycle.