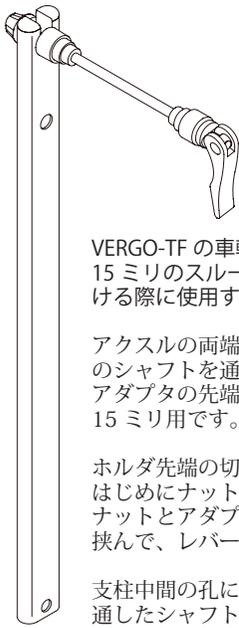


**MINOURA****12/15mm スルーアクスル用  
クイック**

Vergo-TF 12/15mm Q/R



4 944924 423360

VERGO-TF の車輪ホルダに、12 ミリあるいは15 ミリのスルーアクスル式ホイールを取り付ける際に使用する専用クイックリリースです。

アクスルの両端にアダプタをはめ、クイックのシャフトを通します。アダプタの先端の段が 12 ミリ用、中間の段が 15 ミリ用です。

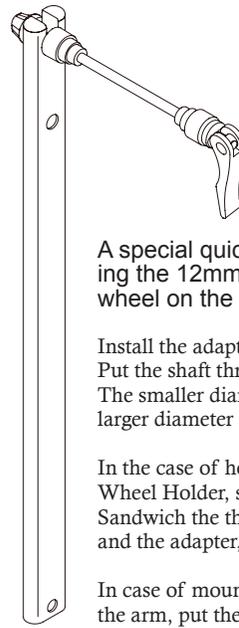
ホルダ先端の切り欠き部に装着する場合は、はじめにナットを軽くねじ込んでおいてから、ナットとアダプタとでホルダ先端の樹脂部を挟んで、レバーを倒して締め付けます。

支柱中間の孔に装着する場合は、アダプタを通したシャフトを孔に貫通させ、反対側にナットをねじ込んで、レバーを倒して締め付けます。

**株式会社 箕浦**

〒 503-2312 岐阜県安八郡神戸町下宮 134-1

TEL (0584) 27-3131 / FAX (0584) 27-7505 / infodesk@minoura.jp

**MINOURA****Quick Release Skewer for  
12/15mm Thru Type Axle**

Vergo-TF 12/15mm Q/R



4 944924 423360

A special quick release skewer for mounting the 12mm or 15mm thru type axle wheel on the Vergo-TF Wheel Holder.

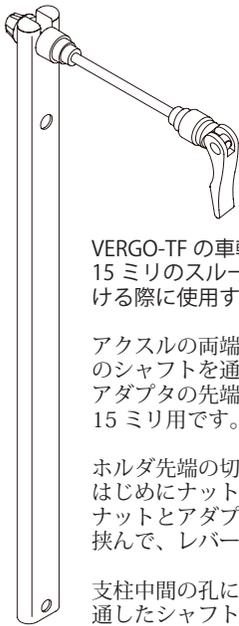
Install the adapters on both sides of thru axle. Put the shaft through the adapters. The smaller diameter is for 12mm size, and the larger diameter is for 15mm size.

In the case of holding the wheel on the tip of the Wheel Holder, screw the nut to the shaft first. Sandwich the the plastic hook between the nut and the adapter, then tighten the skewer.

In case of mounting the wheel onto the hole in the arm, put the shaft into the hole. Screw the nut to the shaft, then tighten the skewer.

**MINOURA JAPAN** 134-1 Shimomiya, Godo, Anpachi, Gifu, Japan

E-MAIL: minoura@minoura.jp / WEB: www.minoura.jp

**MINOURA****12/15mm スルーアクスル用  
クイック**

Vergo-TF 12/15mm Q/R



4 944924 423360

VERGO-TF の車輪ホルダに、12 ミリあるいは15 ミリのスルーアクスル式ホイールを取り付ける際に使用する専用クイックリリースです。

アクスルの両端にアダプタをはめ、クイックのシャフトを通します。アダプタの先端の段が 12 ミリ用、中間の段が 15 ミリ用です。

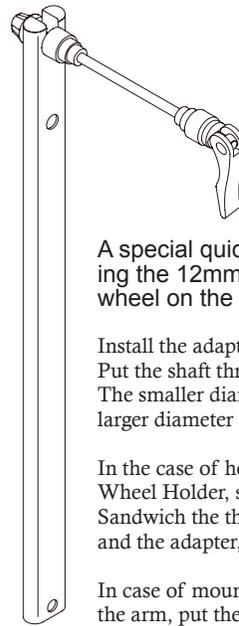
ホルダ先端の切り欠き部に装着する場合は、はじめにナットを軽くねじ込んでおいてから、ナットとアダプタとでホルダ先端の樹脂部を挟んで、レバーを倒して締め付けます。

支柱中間の孔に装着する場合は、アダプタを通したシャフトを孔に貫通させ、反対側にナットをねじ込んで、レバーを倒して締め付けます。

**株式会社 箕浦**

〒 503-2312 岐阜県安八郡神戸町下宮 134-1

TEL (0584) 27-3131 / FAX (0584) 27-7505 / infodesk@minoura.jp

**MINOURA****Quick Release Skewer for  
12/15mm Thru Type Axle**

Vergo-TF 12/15mm Q/R



4 944924 423360

A special quick release skewer for mounting the 12mm or 15mm thru type axle wheel on the Vergo-TF Wheel Holder.

Install the adapters on both sides of thru axle. Put the shaft through the adapters. The smaller diameter is for 12mm size, and the larger diameter is for 15mm size.

In the case of holding the wheel on the tip of the Wheel Holder, screw the nut to the shaft first. Sandwich the the plastic hook between the nut and the adapter, then tighten the skewer.

In case of mounting the wheel onto the hole in the arm, put the shaft into the hole. Screw the nut to the shaft, then tighten the skewer.

**MINOURA JAPAN** 134-1 Shimomiya, Godo, Anpachi, Gifu, Japan

E-MAIL: minoura@minoura.jp / WEB: www.minoura.jp