

Installation


Required Tools

4 mm Hex Wrench
Torque Wrench (6-8 N.m)

Set Contents

Main Stand : 1
M5 × 40mm Bolt : 2
M5 Washer : 2

1. Remove the original mounting bolts from the G Line flat mount. Do not reuse the factory bolts.
2. Position the kickstand body against the flat mount.
3. Install the components in the following order: kickstand body → flat washer → supplied bolt.
4. ONLY use the bolts provided with this product to ensure proper fit and secure fastening.
5. Tighten the bolts to 6–8 N·m using a calibrated torque wrench. Do NOT exceed the specified torque to avoid damage to the frame or brake mount.
6. After installation, confirm that the brake caliper is properly aligned, the rotor spins freely without rubbing, and the kickstand operates smoothly.

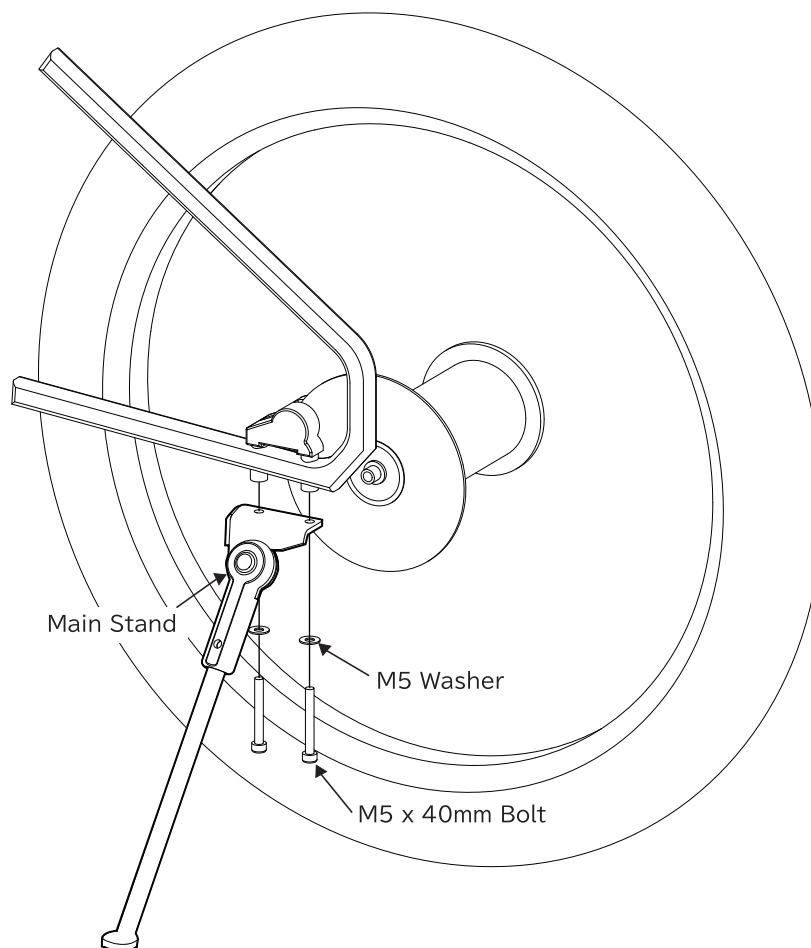

WARNING

This stand is designed to support only the bicycle's weight. Do NOT use the stand when carrying luggage or cargo, or while a person is sitting on the bicycle.

If you have any questions about installation, please contact the retailer where you purchased this product. This product is an aftermarket accessory designed for compatibility with G Line models. It is NOT manufactured or endorsed by the bicycle manufacturer.