


MINOURN Bike Holding Assist-Bar ASB-10 instructions manual


(ver.1.2 2019/2)



Adjustable Size

Loosen the knob bolt in anticipation of adjusting the length.



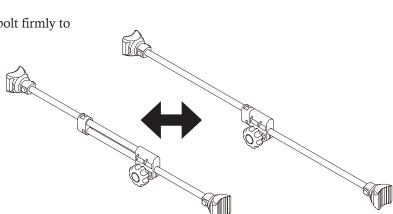


Min: 355mm

Max: 580mm


Pad Angle

The pad that touches the bike frame directly can rotate 360 degrees to fit any tube direction.

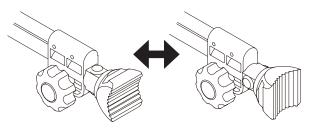


Velcro Tape

The Velcro tape of ASB-10 comes in two sizes in order to fit any frame dimensions.

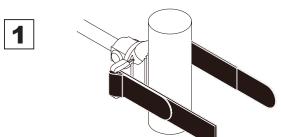


First, separate the two tapes.



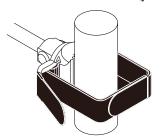

Place the pad on the frame, then wrap the tape around the tube.



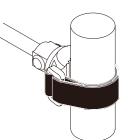

From the opposite side, take the tape apart. Wrap the tape until it grips the frame firmly.

If the tape is too loose and can't be adjusted any further, repeat Step-2 and make the belt loop smaller.

MINOURA JAPAN

Made in Japan

134-1 Shimomiya, Godo, Anpachi, Gifu 503-2312 Japan Mail: minoura@minoura.jp / Web: www.minoura.jp